



NEED HELP WITH YOUR LAUNDRY?

QUICK GUIDE TO HELP YOU SORT YOUR LAUNDRY OUT ONE LOAD AT A TIME



STEP 1

PLACE LAUNDRY IN A WASHING MACHINE OR DRYER THAT IS AVAILABLE

PLACE YOUR WASHING DETERGENT HERE



Washing Machine




Dryer (top washers)



STEP 2

PLACE WASHER POWDER INTO COMPARTMENT

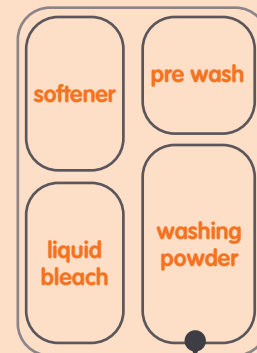

STEP 3

MAKE PAYMENT USING YOUR PHONE OR KIOSK

IF YOU NEED TO TOP UP SEE LAUNDRY MOBILE TOP UP GUIDE

PAY BY MOBILE

1. Visit website
2. Select your machine
3. Make payment
4. Start your machine



PAY BY KIOSK

1. Locate kiosk
2. Select your machine
3. Make payment
4. Start your machine



STEP 4

RETURN TO YOUR SELECTED WASHING MACHINE OR DRYER AND CHOOSE YOUR PREFERRED SETTING TO CONTINUE



DRYER SETTINGS:

- High heat
- Low heat
- No heat
- Medium heat
- Delicate low heat

WASHING MACHINE SETTINGS:

- A » Light load (40 min cycle)
- B » Med. load (42 min cycle)
- C » Heavy load (46 min cycle)
- 90 » Regular hot wash
- 60 » Regular warm wash
- 40 » Regular cold wash
- 60 » Delicate wash – Warm wash & rinse
- 30 » Delicate wash – Warm & cold rinse
- Delicate cold wash



STEP 5

CLICK ON THE GREEN ICON TO START LOAD



STILL A BIT UNSURE? POP DOWN TO FRONT DESK FOR HELP